



TECHNICAL MANUAL

VTM-98006E

**OPERATION AND INSTALLATION
INSTRUCTIONS**

**HF BROADBAND ANTENNA
MODEL VBBA 2-30**

Valcom Limited

175 Southgate Drive, P.O.Box 603, Guelph, Ontario, Canada N1H 6L3 Tel: 519-824-3220 Fax: 519-824-3411
Web Site: www.valcom-guelph.com Email: enquiries@valcom-guelph.com

RECORD OF CHANGES

CHANGE NUMBER	DATE	TITLE OF BRIEF DESCRIPTION	ENTERED BY
--	Jan 2001	- Original Issue	H.D.
- A -	May 2002	- Added additional cable and connector information - Fixed minor typing errors	J.S.
- B -	Sept 2002	- Deleted reference to LC-N type and 7/8" Heliax adapters as being included - They are options to be ordered separately by the customer	J.S.
- C -	Nov 2003	- Added detail to Figure 4-1	J.S.
- D -	Aug 2006	- Change to 7/8 EIA Connector and related parts	HD..
- E -	Aug 2007	Added Maintenance Section	J.Soper

Table of Contents

Section	Page
1	GENERAL INFORMATION AND SAFETY PRECAUTIONS 1
1-1	General Safety Precautions 1
1-2	Specific Warnings 1
1-3	Introduction 2
1-4	Equipment Description 2
1-5	Relationship to Other Equipment 2
1-6	Reference Data 2
1-7	Equipment Accessories, and Documents Supplied 2
2	OPERATION 6
2-1	Introduction 6
2-2	Controls and Indicators 6
2-3	Operating Procedures 6
2-3.1	Operator Turn-on 6
2-3.2	Modes of Operation 6
2-3.3	Operation Under Interfering Conditions 6
2-3.4	Operator Turn-off 6
2-3.5	Emergency Operation 6
2-3.6	Emergency Turn-off 6
3	FUNCTIONAL DESCRIPTION 7
3-1	Functional Description 7
4	INSTALLATION 8
4-1	Site Information 8
4-2	Tools and Materials Required 8
4-3	Unpacking and Repacking 8
4-4	Foundation 8
4-5	Input Requirements 8
4-6	Installation 8
4-7	Cables and Connectors 9
4-8	Installation Checkout 10
5	MAINTENANCE 11
5-1	Preventative Maintenance 11
5-2	Corrective Maintenance 11

LIST OF ILLUSTRATIONS

Figure		Page
1-1	Antenna VBBA 2-30	3
4-1	Installation Data	11

LIST OF TABLES

Table		Page
1-1	Reference Data	4
1-2	Equipment and Documents Supplied	5
4-1	Cable and Connector Group Suggestions	10

SECTION 1

GENERAL INFORMATION AND SAFETY PRECAUTIONS

- 1-1 **GENERAL SAFETY PRECAUTIONS.** The following general safety precautions are not related to any specific procedures and therefore do not appear elsewhere in this publication. These are recommended precautions that personnel must understand and apply during many phases of operation and maintenance.

WARNING

Keep away from live circuits. Operating personnel must at all times observe all safety regulations, to prevent serious injury or death due to electrical shock.

Do not service or adjust alone. Under no circumstances should any person service or adjust the equipment except in the presence of someone who is capable of rendering aid.

Personnel working with or near high voltages should be familiar with modern methods of resuscitation.

- 1.2 **SPECIFIC WARNINGS.** The following specific precautions are related to inspecting and removing the antenna.

WARNING

Ensure that the transmitting equipment is de-energized prior to inspection of the antenna. Make sure the test equipment is properly grounded, to prevent electric shock.

CAUTION

Make sure the antenna is properly supported before removing its mounting hardware.

CAUTION

Do not coat the insulator with any substance; do not paint with lead base paints.

- 1-3 INTRODUCTION. This manual provides general information, operating and functional description, and installation data for Valcom's VBBA 2-30 broadband antenna.
- 1-4 EQUIPMENT DESCRIPTION. The VBBA 2-30 Broadband Antenna (see figure 1-1) is a whip antenna for general use with HF communications equipment. The antenna provides vertically polarized, omnidirectional azimuth radiation from 2 to 30 MHz when the antenna is operated with a HF transceiver. It is designed for use under the severe environmental conditions encountered aboard Naval vessels. It is used for either receiving or transmitting high frequency signals. The antenna is a two section antenna and is base mounted. The mounting flange and insulator is a single integral part made from fibreglass.
- 1-5 RELATIONSHIP TO OTHER EQUIPMENT. The VBBA 2-30 Antenna interfaces with the HF receiving and transmitting equipment.
- 1-6 REFERENCE DATA. Table 1-1 lists the reference data for the antenna.
- 1-7 EQUIPMENT ACCESSORIES, AND DOCUMENTS SUPPLIED. Table 1-2 lists the equipment and documents supplied.

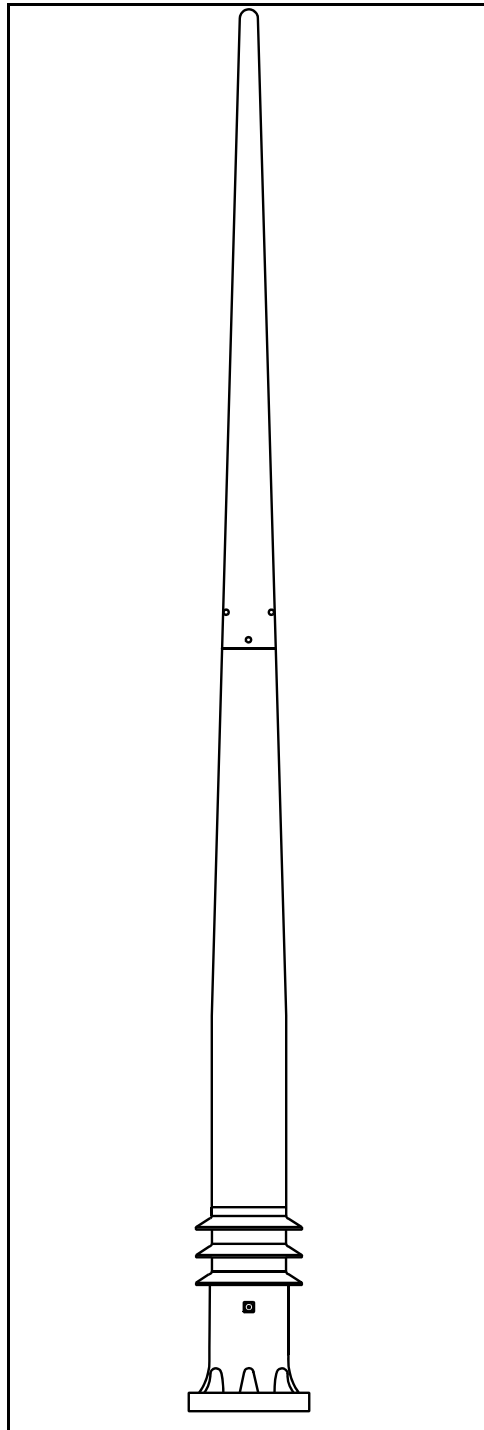


Figure 1-1 Antenna VBBA 2-30

Table 1-1 Reference Data

PARAMETER	SPECIFICATION
Nomenclature	Antenna, VBBA 2-30
Manufacturer	35736
Frequency Range	2-30 MHz
VSWR	2.0:1 Maximum
Polarization	Vertical
Power Rating	2 kW
Azimuth Coverage	Omnidirectional
Input Connection	7/8 EIA Flange (see Note 1)
Temperature	-50°C to 65°C (-60°F to 150°F)
Wind Velocity	140 mph (224 kph)
Humidity	0 - 100 %
Shock	MIL-S-901C Grade A
Vibration	MIL-STD-167-1 Type 1

NOTES: 1. For 1 kW operation, an 7/8 EIA to N adapter can be supplied (optional)

Table 1-2 Equipment, Accessories and Documents Supplied

QTY	NOMENCLATURE	OVERALL DIMENSIONS (INCHES)				WEIGHT (POUNDS) UNCRATED
		CRATED		UNCRATED		
		HEIGHT	DIA	HEIGHT	DIA	
1	ANTENNA VBBA 2-30 P/N VD-97-00061-1	---	---	421	13.0 Base	260
1	TECHNICAL MANUAL FOR VBBA 2-30 ANTENNA VTM-98006					
1	DC-4 ELECTRICAL INSULATING COMPOUND					
9	MS24693-C140 3/8-16 X .75 L FLAT HD SCREW					
1	MIL-T-22361 ANTI-SEIZE COMPOUND					
1	GROUND STRAP P/N VC-97-00069-1					
1	7/8 EIA to N Type ADAPTER (ANDREW PN: 2260B) (NOTE: Optionally supplied for 1 kW or less operation)					
1	1/2" HELIAX CABLE (LDF4-50A) CONNECTOR ANDREW P/N: L44R (NOTE: Optionally supplied for 1kW or more operation)					

SECTION 2

OPERATION

- 2-1 INTRODUCTION. This chapter provides operating instructions for the antenna.
- 2-2 CONTROLS AND INDICATORS. The antenna contains no controls or indicators.
- 2-3 OPERATING PROCEDURES.
 - 2-3.1 Operator Turn-On. No operator turn-on procedures apply since no power is required to operate the antenna. However, the antenna is coupled to RF equipment (transmitter/receiver) and to associated systems which may require energizing. For operating instructions, consult the appropriate technical manuals.
 - 2-3.2 Modes of Operation. The antenna operates automatically, and no operator intervention is required other than interconnecting the associated transmitter or receiver with the antenna.
 - 2-3.3 Operation Under Interfering Conditions. No additional or alternate instructions are necessary to operate the antenna under interfering conditions.
 - 2-3.4 Operator Turn-off. Since no power is required to operate the antenna, no operator turn-off is required. However, the specific equipment connected to the antenna may require operator turn-off. Consult the associated technical manuals for turn-off procedures.
 - 2-3.5 Emergency Operation. No additional or alternate steps are necessary to operate the antenna under emergency conditions.
 - 2-3.6 Emergency Turn-off. The antenna requires no emergency turn-off. For emergency turn-off of specific equipment connected to the antenna, consult the associated technical manuals.

SECTION 3

FUNCTIONAL DESCRIPTION

- 3-1 **FUNCTIONAL DESCRIPTION.** The VBBA 2-30 Broadband Antenna is a base mounted, high-power antenna which provides omnidirectional coverage for general purpose communications use from 2 to 30 MHz. The antenna consists of a radiating element, and a fibreglass base insulator/mounting flange. The radiating element tapers from approximately 8.25 inches in diameter at the insulator to 2.17 inches at the top. The antenna base insulator electrically isolates the radiating section of the antenna from the ground and physically supports it. The insulator/mounting base is constructed of high-strength, laminated epoxy fibreglass material. When assembled, the overall length of the antenna is approximately 35 feet. The antenna disassembles into 2 sections. The broadband feature of the antenna means no antenna coupler is required. The transmitter or receiver only is required to be connected to the antenna.

SECTION 4

INSTALLATION

- 4-1 **SITE INFORMATION.** Valcom's VBBA 2-30 HF Antenna is designed primarily for shipboard installation. The antenna can also be used at shore installations. The antenna should be installed in a non-obstructed environment, clear from any contiguous structures, such as masts, bulkheads, or other metal objects.
- 4-2 **TOOLS AND MATERIALS REQUIRED.** No special tools and materials are required for installation.
- 4-3 **UNPACKING AND REPACKING.** Table 1-2 gives data on the overall dimensions, volume, and weight of the uncrated antenna. To unpack, carefully pry off the cover, and remove the antenna from the container. Save the container to pack the antenna for reshipment. No special handling procedures are required; observed normal precautions when handling the antenna.
- 4-4 **FOUNDATION.** The antenna should be installed vertically on a mounting plate that has bolt holes matching those in the antenna base (see figure 4-1).
- 4-5 **INPUT REQUIREMENTS.** The antenna has an rf power handling capability of 2 kW in the 2 to 30 MHz frequency range.
- 4-6 **INSTALLATION PROCEDURES.** After unpacking the antenna, proceed with its installation as follows:
- a. Examine the exterior of the antenna for damage; make sure that the top of the lower section and the bottom of the upper section has not been damaged, misaligned, or fractured.
 - b. Before assembling the two sections together, the sleeve at top of the bottom section must be coated with an electrically conducting compatible zinc base anti-seize compound MIL-T-22361 (supplied).
 - c. Place the bottom section of the antenna on two saw horses. After applying the anti-seize compound to the mating sleeve, carefully slide the antenna top section over the sleeve making sure the arrows on each section are aligned.
 - d. Ensure the eight holes are in line between the two sections. Install the eight countersink flat head screws to the two sections. After installation, seal the screw heads and the antenna joint using the insulating compound.

e. Carefully lift the antenna to its mounting platform. Align the mounting holes of the base flange with the mounting holes in the platform.

f. Secure the antenna to its mounting plate with using eight 5/8-11 hex head cap screws, flatwashers (two per bolt required), split lockwashers and nuts. Bolt length will be determined by the installing activity.

g. Make sure the ground strap supplied with the antenna is connected to one of the mounting bolts directly below the input connector on the antenna as shown in Figure 4-1.

h. The VBBA 2-30 antenna input is an 7/8 EIA Flange and is found on the base insulator below the drip shields. Prior to connecting the system feedline, ensure the equipment has been de-energized and proper lock out procedures followed. Once the lockout procedures have been performed, connect the system feedline to the antenna. For 1 kW operation with the antenna, an 7/8 EIA to N Adapter can be supplied for connecting to an N type feedline cable connector. For more than 1 kW operation, a 7/8 EIA Flange can be supplied for the feedline used. Ensure the ground wire supplied has a secure connection at the input connector on one end and the other end to the antenna mounting bolt. Seal the ground connection at both ends using the insulation compound provided.

4-7 CABLES AND CONNECTORS. Other types of cables and connectors can be used to connect the antenna's input connector to the radio equipment. Some suggestions can be found in table 4-1.

Table 4-1 Cable and Connector Group Suggestions

Group 1 (Helix Cable)	Cable: LDF4-50A (Andrew) (1/2" Dia., 50 , 3 kW @ 30 MHz) Connector: 7/8 EIA Flange L44R (Andrew)
Group 2 (Helix Cable)	Cable: LDF5-50T (Andrew) (7/8" dia., 50 , 14 kW @ 30 MHz) Connector: 7/8 EIA Flange L45R (Andrew)
Group 3 (1kW)	Cable: RG-214/U Connector: N-type UG-21E/U

4-8 INSTALLATION CHECKOUT. Checkout of the antenna after installation can only be accomplished by operating the receiving and transmitting equipment that is used with the antenna.

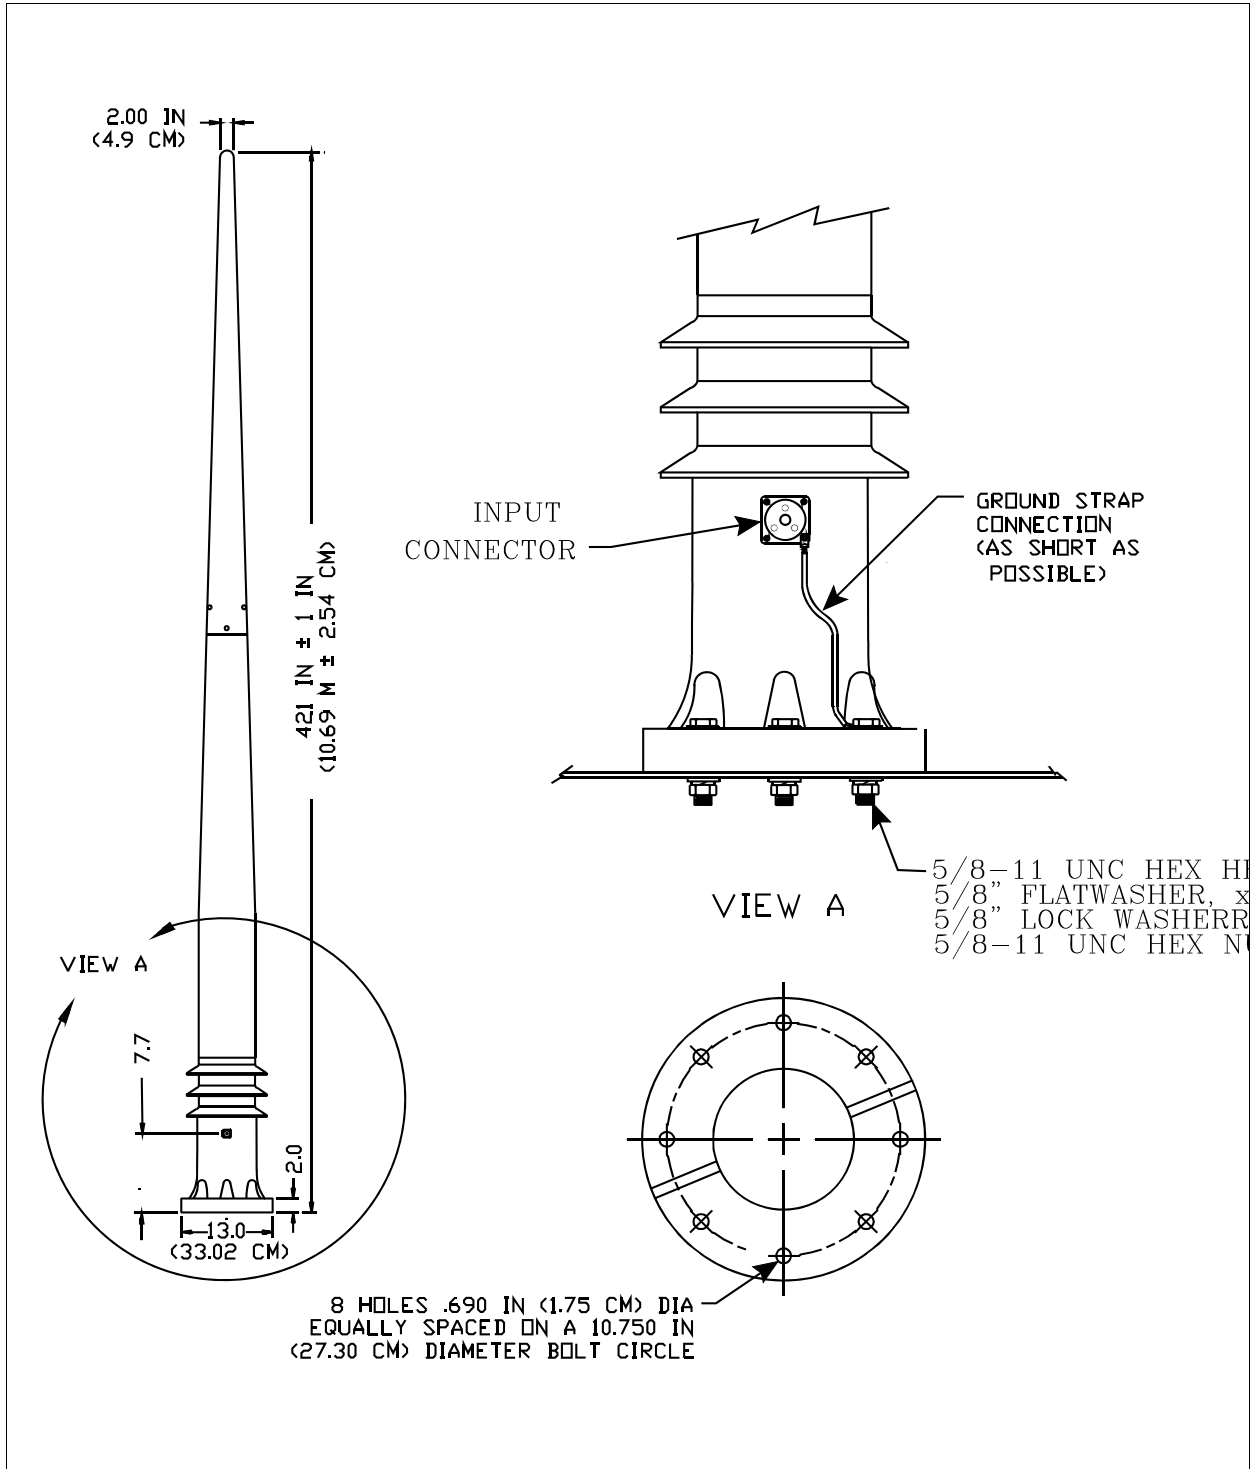


Figure 4-1 Installation Data

5.0 MAINTENANCE

5.1 Scheduled Maintenance

The antenna is virtually maintenance free. The external finish is a silicone alkyd paint. The minimum finish life before showing signs of deterioration should be at least six years under normal climate conditions.

When used in salt-water environments, it is recommended to wash the antenna base with fresh water to remove any build-up of dried salt residue. This should be performed on a monthly basis or after prolonged exposure to sea-spray.

Use a small wire brush to clear any debris from the drain groove found in the bottom of the antenna base.

5.2 Corrective Maintenance

Generally, no corrective maintenance is possible or required. If one section is severely damaged, it must be replaced by a new section. Workshops having experience in handling epoxy fibreglass composite structures and/or aluminum construction may attempt the repair of minor surface damage if practicable.

NOTE

DO NOT USE LEAD BASE PAINT TO TOUCH-UP OR
REPAINT THE ANTENNA. USE ONLY EPOXY BASE PAINT.